

*ARCHline.XP<sup>®</sup> 2011*

*Windows*

Architectural Design,

Interior Design

Manual

Information in this document is subject to change without notice and does not represent a commitment on the part of CadLine. The software, which includes the information contained in any databases, described in this document is furnished under a license agreement or nondisclosure agreement. The software may be used or copied only in accordance with the terms of the agreement. It is against the law to copy the software on any medium except as specifically allowed in the license or nondisclosure agreement. The licensee (purchaser) may make one copy of the software for the purpose of creating a -backup copy. No part of this manual may be reproduced, transmitted, transcribed, or translated into any language in any form or by any means, without the express written permission of CadLine.

First Edition  
2011 CadLine. All rights reserved.

In no event shall CadLine be liable for special, indirect or consequential damages in connection with or arising from the use of this document or any programs contained herein.

Microsoft, MS, and MS-DOS are registered trademarks and Windows is a trademark of Microsoft Corporation.

ARCHLine.XP® is a trademark of CadLine.

This manual was produced using Microsoft Word and ARCHLine.XP®.

# Content

<b>Introduction .....</b>	<b>3</b>
1.1. Definition .....	3
1.1.1. Introduction.....	3
1.1.2. Principles.....	3
1.1.3. Manual conventions .....	3
1.2. Installing ARCHLine.XP .....	5
1.2.1. System requirements .....	5
1.2.2. DirectX support.....	5
1.2.3. Installation and starting the program .....	6
1.2.4. Install the LAN (local area network) version.....	7
<b>2. Interface .....</b>	<b>11</b>
2.1. Mouse .....	12
2.1.1. Single click with the left button .....	12
2.1.2. Double click with the left button.....	13
2.1.3. Single click with the right button .....	13
2.1.4. How to use the mouse.....	18
2.1.5. How to use the wheel of the mouse .....	18
2.1.6. The shape of the cursor .....	20
2.2. Keyboard.....	25
2.2.1. Defining values.....	25
2.2.2. Enter key .....	26
2.2.3. Special keys .....	26
2.2.4. CTRL key.....	26
2.2.5. SHIFT key.....	31
2.2.6. ESC key .....	32
2.2.7. ARROW keys .....	32
2.2.8. Alt key.....	33
2.2.9. Function keys .....	35
2.2.10. Page up - Page Down keys.....	35
2.2.11. Define keyboard shortcuts.....	35
2.3. Menus .....	39
2.3.1. Menu bar .....	39
2.3.2. Context sensitive menus .....	39
2.4. Toolbox .....	41
2.4.1. Short and long mouse click .....	42
2.4.2. Mouse handling: Long click mode can be switched off .....	43
2.4.3. Toolbox setup .....	43
2.4.4. Toolbox working modes.....	44
2.5. Property manager .....	46
2.5.1. Sub-Selection with Property Manager .....	51

2.5.2. Intersection of two-or more selections.....	51
2.6. Command line .....	53
2.7. NaviBar .....	53
2.7.1. Zoom .....	54
2.7.2. Pan .....	55
2.7.3. Rotation in 3D.....	56
2.7.4. View tools in 3D.....	56
2.8. Markers .....	59
2.8.1. Markers' operation.....	59
2.8.2. Markers' behaviours in different views .....	61
2.8.3. Types of markers and accessible commands .....	62
2.8.4. Design layered walls and roofs .....	65
2.8.5. Marker settings.....	65
2.8.6. Main axis markers for 3D move.....	67
2.8.7. Editing 3D solids.....	68
2.9. Toolbars .....	73
2.9.1. Status line.....	76
2.9.2. Layer toolbar .....	79
2.9.3. Edit toolbar .....	79
2.9.4. Move toolbar.....	80
2.9.5. Reference toolbar.....	81
2.9.6. View toolbar.....	83
2.9.7. 3D View toolbar .....	84
2.9.8. 3D Mode toolbar.....	84
2.9.9. Design Center - F9 .....	86
2.9.10. 3D Edit toolbar.....	92
2.9.11. Photo toolbar .....	93
2.9.12. 2D edit toolbar .....	93
2.9.13. Status bar .....	94
2.9.14. Sun setting toolbar .....	95
2.9.15. Quick search engine.....	96
2.10. Window handling.....	98
2.10.1. Activate window.....	100
2.10.2. Close window .....	102
2.10.3. Modify windows .....	102
2.10.4. Open new window .....	102
2.10.5. Arrange windows .....	103
2.11. Screen setting.....	106
2.11.1. Snap grid.....	106
2.11.2. Angle snap .....	108
2.11.3. Screen properties .....	109
2.11.4. 3D work plane .....	115
<b>3. Settings .....</b>	<b>119</b>
3.1. Architectural settings.....	119
3.1.1. Units of measurement .....	119
3.1.2. Angle .....	120

---

3.1.3. Scale factor .....	122
3.1.4. Construction Grid .....	122
3.1.5. Setting stair standards.....	124
3.2. Specifying properties .....	127
3.2.1. General properties.....	127
3.2.2. Material properties.....	130
3.2.3. Using sets of properties.....	154
3.2.4. Assigning cost variables.....	158
3.2.5. Cost estimation – assigning cost parameters.....	164
3.2.6. Cost estimation – placing cost parameters .....	166
3.3. Managing layers.....	167
3.3.1. Working with layers from the dialog .....	168
3.3.2. Layer groups .....	171
3.3.3. Activate layers .....	173
3.3.4. Layer properties .....	174
3.3.5. Layer control mode.....	176
3.3.6. Modify layer .....	180
3.3.7. Layer Walk tool .....	181
3.4. Floor and building management .....	185
3.4.1. Creating floors .....	189
3.4.2. Activating floors .....	190
3.4.3. Floor properties .....	191
3.4.4. Building properties.....	192
3.4.5. Floor management .....	194
3.4.6. Managing multiple buildings (for experienced users only).....	196
<b>4. File management.....</b>	<b>203</b>
4.1. Introduction .....	203
4.1.1. Project management .....	203
4.1.2. Building.....	204
4.1.3. Floor .....	205
4.2. Project <i>management</i> .....	206
4.2.1. New project .....	207
4.2.2. Search projects .....	208
4.2.3. Opening a project.....	211
4.2.4. Import and export files.....	214
4.2.5. Import file into a project.....	214
4.2.6. Saving project.....	215
4.2.7. Saving project as.....	218
4.2.8. Archive .....	219
4.2.9. Auto save .....	220
4.3. Project navigator .....	222
4.3.1. Project navigator in details .....	222
4.3.2. How to use the Project Navigator? .....	223
4.3.3. Preview.....	226
4.3.4. Save 3D database .....	226
4.3.5. Notes .....	227

4.3.6. Zones .....	228
4.3.7. Categories .....	228
4.4. Drawings .....	234
4.4.1. New project or drawing .....	235
4.4.2. Opening drawings .....	235
4.4.3. Saving drawings .....	236
4.4.4. Save drawing as .....	236
4.5. Import/Export .....	237
4.5.1. ASC Import .....	238
4.5.2. DXF/DWG import/export .....	240
4.5.3. 3DS Import .....	254
4.5.4. Online collection .....	259
4.6. Managing templates .....	262
4.6.1. The drawing template .....	262
4.6.2. Setting your drawing template .....	263
4.6.3. Template file .....	263
4.6.4. Saving templates .....	263
4.6.5. Template import wizard .....	266
4.7. Directory settings .....	268
4.8. Environment package .....	269
4.8.1. Create package .....	269
4.8.2. Unpacking .....	273
<b>5. Data entry .....</b>	<b>278</b>
5.1. Defining coordinates .....	278
5.1.1. Defining points with snap grid .....	280
5.1.2. Defining points by using special points .....	280
5.2. Defining angle .....	281
5.2.1. Direction by triangle .....	281
5.2.2. Defining direction with Angle snap .....	283
5.2.3. Direction control by using the <i>Shift</i> button .....	284
5.2.4. Defining direction with the HV cursor .....	284
5.2.5. Defining direction with arrows .....	285
5.2.6. Defining direction with Reference toolbar .....	285
5.3. AutoCAD® compatible coordinate input .....	286
<b>6. Views .....</b>	<b>289</b>
6.1. Setting view .....	289
6.1.1. View toolbar .....	289
6.1.2. Enlarging with View menu - Zoom .....	289
6.2. Building 3D models .....	291
6.2.1. 2D -> 3D .....	291
6.2.2. Creating 3D models with keyboard shortcuts .....	298
6.2.3. View menu – Refresh 3D .....	299
6.3. 3D views .....	300
6.3.1. View menu - View Properties – Define View .....	300

---

6.3.2. 3D view toolbar - Named views .....	302
6.3.3. Perspective view.....	303
6.3.4. Define view by two points .....	306
6.3.5. Navigation in 3D.....	307
6.3.6. Background image .....	309
6.3.7. 3D window graphics settings.....	309
6.3.8. Shadows.....	317
6.3.9. Heliodon .....	325
6.3.10. Sun settings.....	327
6.3.11. North direction .....	328
6.3.12. Show/hide objects .....	329
6.3.13. Walk and Fly .....	330
6.3.14. Further settings of showing 3D solids .....	334
6.4. Show 2D.....	339
6.4.1. Hide objects.....	339
6.4.2. Show classes .....	339
6.5. Section .....	340
6.5.1. Dynamic section .....	341
6.5.2. Static section - Copy section view content into a 2D window....	354
6.5.3. Stepped section in a 3D section window.....	356
6.5.4. Cutting a 3D model.....	357
6.5.5. Dynamic section plane .....	359
6.6. Opening and wall scale factor.....	364
6.7. Hand-sketching .....	366
6.7.1. Assign to all.....	366
6.7.2. Assign.....	366
6.7.3. Delete .....	367
6.7.4. Parameters.....	367
6.8. Magnifier tool.....	368
<b>7. Selection .....</b>	<b>371</b>
7.1. Selection with the mouse .....	371
7.1.1. Selecting one element.....	372
7.1.2. Selecting more elements.....	372
7.1.3. Rectangle selection .....	373
7.1.4. Quick Class selection .....	374
7.1.5. Quick selection dialog .....	374
7.2. Selection menu .....	376
7.2.1. Enter.....	376
7.2.2. Selection by window.....	376
7.2.3. Selection by polygon .....	377
7.2.4. By fence .....	378
7.2.5. Selection by properties.....	379
7.2.6. Last selection .....	385

---

<b>8. Editing .....</b>	<b>387</b>
8.1. General editing commands .....	389
8.1.1. Undo - Ctrl Z .....	389
8.1.2. Redo - Ctrl Y .....	389
8.1.3. Program clipboard .....	389
8.1.4. Copy bitmap to clipboard .....	391
8.1.5. Paste bitmap from clipboard .....	391
8.1.6. Snapshot .....	391
8.1.7. Move .....	398
8.1.8. Rotate .....	402
8.1.9. Mirror .....	402
8.1.10. Scale .....	403
8.1.11. Delete single (Ctrl + D) .....	404
8.1.12. Delete .....	405
8.1.13. Stretch .....	409
8.1.14. Offset .....	410
8.1.15. Trim .....	413
8.1.16. Break .....	415
8.1.17. Lengthen .....	416
8.2. Main axis markers for 3D move .....	419
8.3. Specifying profile .....	420
8.3.1. Polygon .....	420
8.3.2. Rectangle .....	421
8.3.3. Rectangle HV .....	421
8.3.4. Circle .....	421
8.3.5. Point of profile .....	421
8.3.6. Point of profile and islands .....	421
8.3.7. Chain one by one .....	422
8.3.8. Make island by offset .....	422
8.3.9. Editable profile .....	423
8.3.10. Select from list .....	426
8.3.11. Select item .....	427
8.3.12. Surface of solid .....	428
8.3.13. Transformed profile .....	428
8.3.14. Last value .....	428
8.3.15. Select connected lines .....	428
8.3.16. Room selection .....	428
8.4. Modification .....	429
8.5. Specifying properties .....	430
8.6. Modifying properties .....	431
8.6.1. Modifying the properties of certain elements .....	431
8.6.2. Copy properties .....	431
8.6.3. Create similar .....	434
8.6.4. Lock architectural object in 3D .....	434
8.6.5. Substitute material .....	437
8.7. Explode .....	441

---

8.7.1. Explode by selection .....	441
8.7.2. Explode .....	441
<b>9. Architecture .....</b>	<b>445</b>
9.1. Wall .....	445
9.1.1. Wall properties .....	446
9.1.2. Creating walls .....	457
9.1.3. Editing walls .....	462
9.1.4. Modifying wall profiles .....	475
9.1.5. Other commands to modify walls .....	485
9.2. Structural and decorative elements .....	495
9.2.1. Column .....	496
9.2.2. Beam .....	503
9.2.3. Sweep - Move profile along path .....	506
9.2.4. Sweep by points in 3D .....	510
9.2.5. Place object in wall .....	510
9.2.6. Extract object from wall .....	511
9.2.7. Modifying column, beam and decoration .....	512
9.2.8. Place plinth .....	513
9.2.9. Define custom plinth .....	513
9.2.10. Closed chain of beams .....	513
9.2.11. Opened chain of beams .....	515
9.2.12. Truss .....	515
9.3. Door, window .....	519
9.3.1. Door/window properties .....	521
9.3.2. Installing a door/window .....	543
9.3.3. Edit or modify doors/windows .....	554
9.3.4. Define custom door/window .....	570
9.3.5. Define custom door/window - Define by 2D hatches .....	571
9.3.6. Define custom door/window - from a 3D model .....	577
9.3.7. Door Wizard .....	579
9.3.8. Corner window .....	595
9.3.9. Openings in the Curtain wall .....	605
9.3.10. Converting object to door / window .....	608
9.4. Slab .....	613
9.4.1. Slab properties .....	613
9.4.2. Creating slabs .....	623
9.4.3. Editing commands for whole slabs .....	628
9.4.4. Editing commands for slab layers .....	631
9.4.5. Creating and editing slab holes .....	633
9.4.6. Decoration .....	635
9.4.7. Modifying slab profiles .....	636
9.4.8. Assign materials .....	639
9.5. Room book .....	641
9.5.1. Room book inside a wall and Room book wizard .....	644
9.5.2. Serial placing of more room books .....	668
9.5.3. Room book inside a free polygon .....	668

---

9.5.4. Modify the boundary of the room book .....	669
9.5.5. Calculate room book outside a building .....	669
9.5.6. Diagonal measuring .....	670
9.5.7. Room partitioning and dimensioning .....	670
9.5.8. Summarize flats .....	671
9.5.9. Show Room volume solid .....	675
9.5.10. Refresh all room book .....	676
9.5.11. Colouring rooms by area .....	676
9.6. Stair .....	679
9.6.1. Stair standards .....	679
9.6.2. Stair properties .....	680
9.6.3. Creating stairs .....	688
9.6.4. Modification of the stair geometry .....	701
9.7. Balustrades .....	708
9.7.1. Balustrade properties and creating balustrades .....	709
9.7.2. Creating new balusters with solid modelling .....	720
9.7.3. Modifying balustrades .....	721
9.7.4. Modify balustrades .....	723
9.8. Roof .....	730
9.8.1. Roof properties .....	732
9.8.2. Creating roofs .....	754
9.8.3. Modifying roof properties .....	775
9.8.4. General editing of roof geometry .....	777
9.8.5. Editing roof nodes .....	789
9.8.6. Editing structural nodes .....	792
9.8.7. Roof – Edit layers .....	794
9.8.8. Roof hole .....	795
9.8.9. Roof framing .....	797
9.8.10. Roof - Information .....	803
9.8.11. Dormer roof .....	807
9.9. Terrain .....	819
9.9.1. Terrain properties .....	819
9.9.2. Visibility on different floors .....	821
9.9.3. 3D representation .....	825
9.9.4. Opening and creating terrains .....	827
9.9.5. Terrain from file .....	827
9.9.6. Creating and modifying plateaus and roads .....	845
9.9.7. Vertical shift of road/discontinuity line .....	850
9.9.8. Profile section definition of road .....	851
9.9.9. Road node height edition on layout .....	852
9.9.10. Terrain zone .....	853
9.9.11. Terrain 3D commands .....	856
9.9.12. Modify terrain .....	860
9.10. Concept 3D .....	873
9.10.1. Start new volume .....	874
9.10.2. Editing volume model .....	878
9.10.3. Walls, divided by floors .....	878

---

9.10.4. Wall as unit.....	879
9.10.5. Curtain walls, divided by floors.....	879
9.10.6. Curtain wall as unit.....	879
9.10.7. Slabs, divided by floors.....	879
9.10.8. Town mock-up.....	879
9.10.9. Automatic building with sloped roof.....	880
9.10.10. Automatic building with flat roof.....	881
9.11. Objects and profiles.....	883
9.11.1. Object properties and placement.....	883
9.11.2. Creating objects.....	892
9.11.3. Sprites in photorealistic view.....	894
9.11.4. Modifying objects.....	899
9.11.5. Creating profiles.....	902
9.11.6. 3D Warehouse.....	903
9.11.7. Create object by photo.....	906
9.12. Freeform surfaces.....	913
9.12.1. Working with Freeform Surfaces.....	914
9.12.2. Layout and 3D model.....	914
9.12.3. Physics.....	915
9.12.4. Grid patterns.....	916
9.12.5. Control lines.....	916
9.12.6. Cables.....	917
9.12.7. Representation.....	917
9.12.8. Thickness.....	919
9.12.9. Structure.....	919
9.12.10. Creating a Freeform Surface.....	920
9.12.11. Modifying the 3D model.....	921
9.12.12. Popup menu commands.....	921
9.12.13. Marker menu commands.....	922
9.12.14. Settings.....	924
9.12.15. General settings.....	925
9.12.16. Representation in 2D.....	925
9.12.17. Geometry.....	925
9.12.18. Representation in 3D.....	926
9.12.19. Grid Layout.....	927
9.12.20. Physics.....	927
9.12.21. Structure.....	928
9.13. Indoor Tools.....	930
9.13.1. Picture on wall.....	930
9.13.2. Indoor blinds.....	934
9.13.3. Table Cloth.....	946
9.13.4. Furniture from Manufacturers.....	948
9.13.5. Cabinet Wizard.....	955
9.14. Outdoor Tools.....	974
9.14.1. External louvres.....	974
9.15. Light Sources.....	980
9.15.1. Light Source Types.....	980

9.15.2. Light browser .....	981
9.15.3. Creating a light source .....	987
9.15.4. Creating a lamp .....	988
9.15.5. Managing lamps .....	989
9.15.6. Editing lamps .....	991
9.15.7. Editing light sources .....	993
9.15.8. Representation of light sources .....	995
9.15.9. Automatic light management .....	997
9.15.10. Lights on the rendered images .....	998
9.15.11. Light sources – compatibility .....	999
9.15.12. Light sources - Selection .....	999
9.16. Electrical accessories .....	1001
9.16.1. Working with Electrical accessories .....	1001
9.16.2. Creating an Electrical accessory .....	1003
9.16.3. Modifying the 3D model .....	1003
9.16.4. Settings .....	1005
<b>10. Dimension .....</b>	<b>1011</b>
10.1. Dimension properties .....	1011
10.1.1. General dimension properties, text, marker .....	1012
10.1.2. Text parameters .....	1015
10.1.3. Format parameters .....	1017
10.2. Creating dimensions .....	1020
10.2.1. Quick dimensioning .....	1021
10.2.2. Wall dimensioning .....	1023
10.2.3. Distance dimensioning .....	1026
10.2.4. Elevation on floor plan .....	1031
10.2.5. Elevation on section .....	1033
10.2.6. Door/Window .....	1035
10.2.7. Deleting door/window dimension .....	1036
10.2.8. Labels .....	1036
10.2.9. Aligned .....	1037
10.2.10. Length (horizontal, vertical) .....	1038
10.2.11. Length aligned .....	1038
10.2.12. Angle .....	1038
10.2.13. Angle (Horizontal) .....	1039
10.2.14. Angle (Vertical) .....	1039
10.2.15. Parallel lines .....	1040
10.2.16. Arc - Dimension .....	1040
10.2.17. Diameter .....	1041
10.2.18. Diameter at given angle .....	1041
10.2.19. Arc length .....	1041
10.2.20. Area .....	1042
10.2.21. Aligned 3D .....	1043
10.2.22. Length 3D .....	1044
10.3. Modify dimensions .....	1044
10.3.1. Moving .....	1045

10.3.2. Moving dimension string.....	1046
10.3.3. Deleting dimension string.....	1046
10.3.4. Moving a part.....	1046
10.3.5. Moving text.....	1047
10.3.6. Inserting dimension.....	1047
10.3.7. Deleting dimension.....	1047
10.3.8. Aligning.....	1047
10.3.9. Parallel distance.....	1048
10.3.10. Stretching.....	1048
10.3.11. Transforming with object.....	1049
10.3.12. Format text.....	1049
10.3.13. Second text.....	1050
10.3.14. Delete from projection line.....	1050
10.3.15. Quick graphical editing of dimensioning.....	1051
10.3.16. Dimension - Remove associativity.....	1051
<b>11. 2D elements.....</b>	<b>1053</b>
11.1. Point.....	1053
11.1.1. Point properties.....	1054
11.1.2. Creating points.....	1055
11.2. Line.....	1058
11.2.1. Line properties.....	1059
11.2.2. Creating lines.....	1063
11.2.3. Modify line.....	1075
11.2.4. 3D extension of line nature elements.....	1077
11.3. Polyline.....	1080
11.3.1. Polyline properties.....	1081
11.3.2. Creating polylines.....	1083
11.3.3. Modify polyline.....	1090
11.3.4. Modify Spline.....	1092
11.4. Circle and arc.....	1094
11.4.1. Circle and arc properties.....	1094
11.4.2. Creating circles.....	1095
11.4.3. Creating arcs.....	1100
11.4.4. Modify Circle and Arc.....	1104
11.5. Ellipse and Elliptic arc.....	1108
11.5.1. Ellipse and elliptic arc properties.....	1108
11.5.2. Creating ellipse.....	1109
11.5.3. Editing Ellipse and elliptic arc.....	1111
11.6. Text.....	1114
11.6.1. Text properties.....	1114
11.6.2. Creating texts.....	1118
11.6.3. Modify texts.....	1133
11.7. Hatch.....	1135
11.7.1. Hatch properties.....	1135
11.7.2. Hatch types.....	1143
11.7.3. Creating hatch.....	1144

11.7.4. Editing hatch.....	1148
11.8. Raster images.....	1155
11.8.1. <i>Insert</i> raster image .....	1156
11.8.2. Image manager.....	1158
11.8.3. <i>Save as</i> raster image .....	1161
11.8.4. <i>Order of raster image</i> .....	1161
11.8.5. Editing raster images.....	1162
11.8.6. Image editor .....	1167
11.8.7. Google Earth Plugin .....	1178
11.8.8. How to use it?.....	1178
11.9. 2D group .....	1180
11.9.1. Group properties .....	1182
11.9.2. Creating group.....	1185
11.9.3. Creating group from architectural elements .....	1187
11.9.4. Insert group .....	1188
11.9.5. Add reference points .....	1193
11.9.6. Group options.....	1193
11.9.7. Create local group.....	1198
11.9.8. Create hatch pattern.....	1198
11.9.9. Define line type pattern .....	1199
11.9.10. Create line type .....	1200
11.9.11. Activate.....	1205
11.9.12. Deactivate .....	1207
11.9.13. Copy geometry to groups .....	1207
11.9.14. Decoration group popup menu.....	1208
11.10. Detailed view.....	1209
11.11. External references .....	1210
11.11.1. Load external reference .....	1210
11.11.2. External reference manager.....	1211
11.11.3. XREF Shortcut menu.....	1215
11.11.4. Move external reference command.....	1216
11.12. Object Linking and Embedding - OLE.....	1217
11.12.1. Inserting an OLE Object .....	1217
11.13. Attaching photo and description to elements .....	1221
11.13.1. Attaching photo and description to elements .....	1221
11.13.2. Viewing attached photos and descriptions .....	1222
<b>12. Inquiry.....</b>	<b>1225</b>
12.1. Query information.....	1225
12.1.1. Element info .....	1225
12.2. Quantity Take-Off.....	1231
12.2.1. Graphic list .....	1231
12.2.2. Element geometrical info.....	1233
12.2.3. Excel list .....	1234
12.2.4. Word list .....	1237
12.2.5. Cost estimation.....	1240

12.2.6. XML lists .....	1242
12.3. Legend of materials .....	1243
<b>13. Rendering and DirectX.....</b>	<b>1245</b>
13.1. Rendering .....	1246
13.1.1. More about rendering .....	1246
13.1.2. Usage of rendering.....	1247
13.1.3. Rendering Settings.....	1249
13.1.4. Render modes.....	1258
13.1.5. Render list – batch render .....	1258
13.2. DirectX 3D .....	1263
13.2.1. DirectX settings .....	1264
13.3. Thea rendering – support.....	1268
13.3.1. How to render with Thea? .....	1268
13.3.2. Photorealistic Rendering dialog.....	1269
13.3.3. Thea materials.....	1273
13.3.4. Conversion .....	1274
13.3.5. Using Thea Render application .....	1275
<b>14. Printing.....</b>	<b>1277</b>
14.1. Plot Layout .....	1277
14.1.1. Prepare plot layout .....	1278
14.1.2. Project Navigator – Drag and Drop drawings .....	1279
14.1.3. Import drawing.....	1280
14.1.4. Modify properties of drawing .....	1282
14.1.5. Copy with rectangle/polygon .....	1283
14.1.6. Paste on layout.....	1283
14.1.7. Edit drawing parts.....	1286
14.1.8. Open plot stamp .....	1288
14.1.9. Fill/modify plot stamp.....	1290
14.1.10. Refresh Layout .....	1290
14.1.11. Refresh One by One.....	1291
14.2. Print to printer .....	1292
14.3. Printing directly in PDF format .....	1300
14.4. Printing the Image 3D image window.....	1302
<b>15. Add-On .....</b>	<b>1305</b>
15.1. Decoration – Tiling .....	1305
15.1.1. Background area .....	1308
15.1.2. Add New Background Area .....	1309
15.1.3. Decors and Borders .....	1310
15.1.4. Edit Background Area .....	1312
15.1.5. Move Background Area .....	1312
15.1.6. Copy Background Area .....	1312
15.1.7. Delete Background Area .....	1313
15.1.8. Subtract Tiles .....	1313

---

15.1.9. Subtract Other Area .....	1313
15.1.10. Tiling.....	1313
15.1.11. Add Tiles .....	1314
15.1.12. Add One Tile .....	1321
15.1.13. Add Custom Tile.....	1321
15.1.14. Tile Properties .....	1323
15.1.15. Redistribute Tiles.....	1324
15.1.16. Move Tiles .....	1324
15.1.17. Copy Tiles .....	1324
15.1.18. Delete Tiles .....	1324
15.1.19. Delete Tiles of Same Type .....	1324
15.1.20. Modify material of background areas and tiles.....	1325
15.1.21. Modify Material .....	1325
15.1.22. Reposition Material.....	1325
15.1.23. Resize material.....	1325
15.1.24. Tiling - Show tile name on tiles.....	1326
15.1.25. Listing tiles.....	1327
15.1.26. Tile Patterns .....	1329
15.2. Drawing comparison .....	1332
15.2.1. Comparison of two floor plans.....	1332
15.2.2. Comparison of two 2D/3D drawings.....	1334
15.3. Calibration and vectorization.....	1336
15.3.1. Calibrate Raster - Fast .....	1337
15.3.2. Calibrate Raster - New .....	1340
15.3.3. Calibrate Raster - Continue.....	1342
15.3.4. Vectorization of images .....	1342
15.4. Inserting 3D model in photo's context.....	1346
15.4.1. Method I – Estimation.....	1346
15.4.2. Method II. - – Known Distances.....	1346
15.4.3. Create photorealistic image.....	1352
15.5. Reconstruction – Survey .....	1355
15.5.1. Specifying room properties.....	1355
15.5.2. Survey .....	1356
15.5.3. Edit and modify rooms.....	1376
15.6. Reconstruction - Photogrammetry .....	1385
15.6.1. Introduction.....	1385
15.6.2. Define orthogonal view.....	1387
15.6.3. Find edges – General.....	1390
15.6.4. Find HV edges.....	1392
15.7. Animation .....	1393
15.7.1. Creating animation by path .....	1393
15.7.2. Virtual reality.....	1404
15.7.3. Solar access protection .....	1408
15.7.4. Shadow animation.....	1414
15.8. 3DTV module .....	1417
15.8.1. Start/Stop 3DTV .....	1417
15.8.2. Configure 3DTV.....	1417

15.9. Virtual Staging.....	1418
15.9.1. Importing raster image.....	1418
15.9.2. Setting up reference 3D model.....	1418
15.9.3. Setting up perspective.....	1419
15.9.4. Refining perspective.....	1421
15.9.5. Rendering.....	1421
15.10. Parking.....	1422
15.10.1. Create parking.....	1423
15.10.2. Properties.....	1424
15.10.3. List of parking lots.....	1425
15.10.4. Boundary.....	1426
15.10.5. Parking lots.....	1428
15.10.6. Parking regeneration.....	1429
15.10.7. New parking lot.....	1430
15.10.8. Define.....	1431
<b>16. 3D settings.....</b>	<b>1435</b>
16.1. General settings.....	1435
16.1.1. 3D workplane representation.....	1435
16.2. Specifying properties.....	1437
16.2.1. 3D solid properties.....	1437
16.3. Global workplane.....	1439
16.3.1. Global workplane definition.....	1440
16.3.2. Activating the workplane.....	1446
<b>17. Basic operations in 3D.....</b>	<b>1447</b>
17.1. Data entry.....	1447
17.1.1. 3D point definition.....	1447
17.1.2. Direction definition.....	1454
17.1.3. Plane definition.....	1458
17.2. 3D selection.....	1461
17.2.1. By identifier.....	1461
17.2.2. All.....	1461
17.2.3. Select in view.....	1462
17.2.4. Except.....	1462
17.2.5. And.....	1462
17.2.6. All solids of an architectural object.....	1462
17.2.7. All objects on floor.....	1462
17.2.8. All objects by type.....	1462
<b>18. Solids.....</b>	<b>1463</b>
18.1. Creating basic solids.....	1463
18.1.1. Block.....	1464
18.1.2. Cylinder.....	1466
18.1.3. Cone.....	1470
18.1.4. 3D basic solids.....	1473

18.2. Creating solids from profile .....	1480
18.2.1. Extruded solid.....	1480
18.2.2. Extrude with extension .....	1481
18.2.3. Creating a rotation solid .....	1483
18.2.4. Axis.....	1484
18.2.5. Solid from two profiles .....	1486
18.3. Profile and path.....	1488
18.3.1. Create.....	1488
18.3.2. Create along simple path .....	1490
18.3.3. Profile and path – Editing .....	1492
18.4. Editing solids.....	1497
18.4.1. Drill .....	1498
18.4.2. Round off.....	1500
18.4.3. Round vertex .....	1502
18.4.4. Chamfer.....	1502
18.4.5. Chamfer vertex .....	1504
18.4.6. Hide/Show edges of a solid-grid.....	1504
18.4.7. Hide/Show all edges of surface .....	1505
18.4.8. 3D model section.....	1505
18.4.9. Splitting.....	1507
18.4.10. Union .....	1510
18.4.11. Subtract.....	1511
18.4.12. Intersection.....	1512
18.4.13. Out of the intersection .....	1513
18.4.14. Explode .....	1514
18.5. Transforming solids.....	1515
18.5.1. 3D Move .....	1516
18.5.2. 3D duplicate .....	1517
18.5.3. 3D mirror .....	1517
18.5.4. 3D duplicate and mirror.....	1517
18.5.5. 3D rotate.....	1517
18.5.6. 3D duplicate and rotate .....	1518
18.5.7. 3D scale .....	1518
18.5.8. 3D duplicate and scale .....	1518
18.5.9. Transform on view .....	1519
18.5.10. Identical.....	1519
18.5.11. Multiple transformation .....	1519
18.5.12. Inverse.....	1520
18.5.13. Last value .....	1520
18.6. Modifying solids.....	1521
18.6.1. Modify height .....	1521
18.6.2. Modify surface angle .....	1522
18.6.3. Radius .....	1522
18.6.4. Colour.....	1522
18.6.5. Edge direction .....	1523
18.6.6. Plane .....	1523
18.6.7. Block length.....	1524

18.6.8. Resolution ..... 1524  
18.6.9. Resolution of surface..... 1524  
18.6.10. Transparency ..... 1525  
18.6.11. Delete surface ..... 1525  
18.6.12. Architectural element -> 3D solid ..... 1526  
18.7. Surface layout ..... 1527  
    18.7.1. Single surface..... 1527  
    18.7.2. All surfaces..... 1527  
18.8. Modify material..... 1529  
    18.8.1. Material of solid ..... 1529  
    18.8.2. Material of surface..... 1529  
    18.8.3. Decoration – 3D solids ..... 1530  
    18.8.4. Modify bitmap size..... 1531